

INFLATION VALVE FOR AIR-LITE® BALL PIT

The Air-Lite Ball Pit Inflates and deflates quickly for easy set-up, storage and travel with high-volume pump (sold separately). To prevent air leakage, the pit comes with a unique two part valve.



Make sure you have the two rings in place and the caps are screwed on tight.



1

Valve is closed. Notice that both rings/washers must be in place.



2

To inflate, unscrew the top but keep the bottom inside valve securely closed. Air will not leak during inflation since this is a one-way valve. After inflating, make sure both caps are tightly closed and both rings/washers are in place. Inflation takes about three minutes with a high volume pump.



3

To deflate, unscrew the entire valve.

QUESTIONS? call us at **800-231-6329** or email us at customer@funandfunction.com. We are committed to going above and beyond to address your questions, ideas and feedback.