
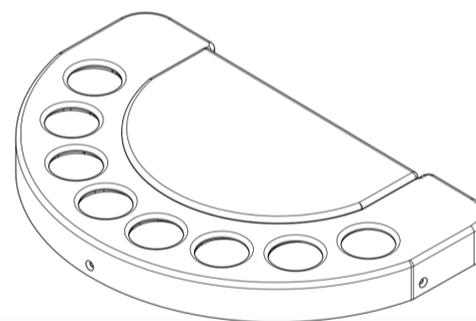


Waterless Color Column

CF7167

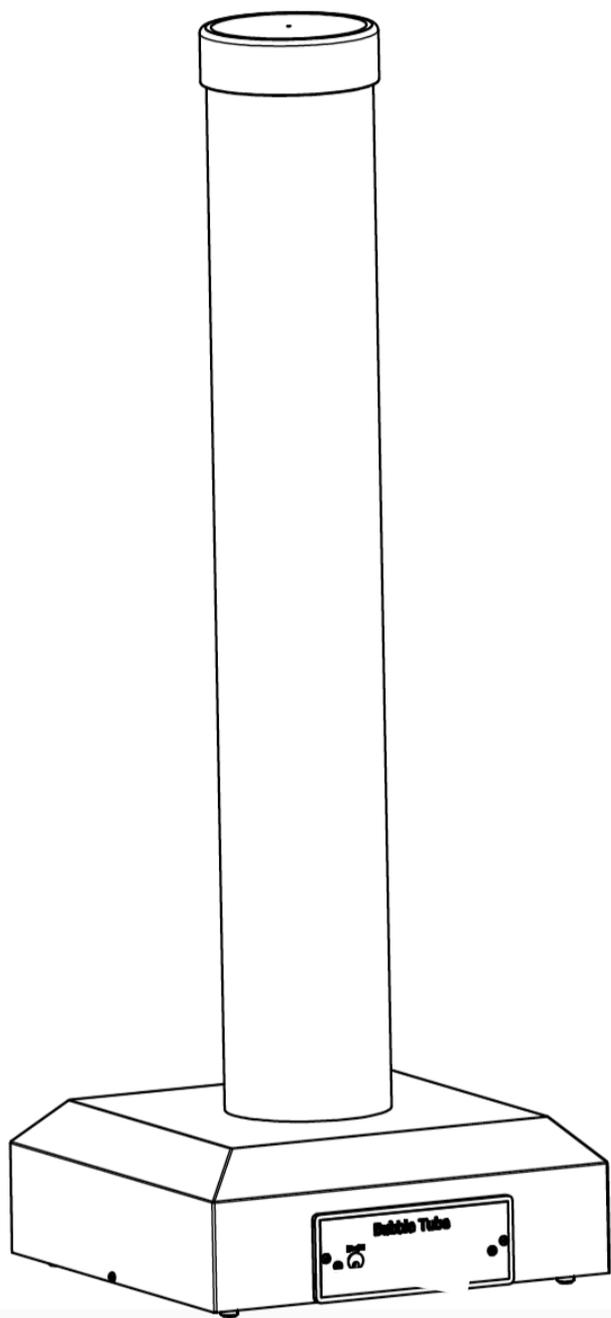

User Manual

50302
August 2022



Contents

Warnings	3
Description	3
Includes	3
Setting Up	4-6
Trouble Shooting	6
Guarantee	7
Contact	8




Warnings

- * This product is designed for users with special needs. Adult supervision is required during use at all times.
- * For indoor use only. The equipment uses a mains power supply.
- * We suggest Wall Bracket EQ7218 (sold separately) to stabilize the column.
- * Never use abrasive cleaning pads to clean this item
- * All remotes used with the Wireless Remote should be volt free

Description

It's a waterless bubble tube! Enjoy the calming benefit of a bubble tube, without having to fill the tube with water. Dim the lights and relax with the soft glow of colorful LEDs. Choose one of the eight programs that auto-rotate through an endless rainbow of colors that swirl, move and bounce. You can also set the column to glow a single color. Both options create a calming and mesmerizing atmosphere, transforming any room into a relaxing sensory space. Helps to develop visual attention and color recognition skills. Includes remote control.


Includes

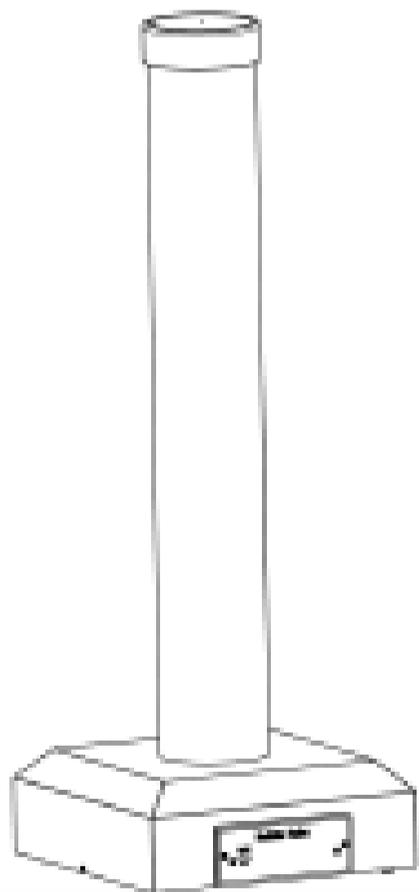


Power Adapter



Power Cord

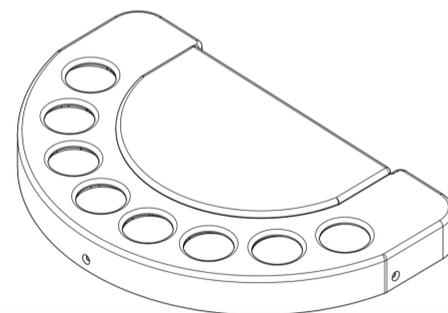

Wireless Remote

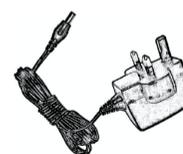

Wireless Remote
Power Cord


Carefully check you have all the parts listed. Inform us immediately if anything is missing.

Setting Up

Remove packaging and protective film from the column. Place the column on level flooring and close to an electrical outlet. If using the wall bracket, place next to a wall.


Operating Waterless Color Column

- Insert the power adapter into the base of the Waterless Color Column
- Insert the power adapter into the power cord and plug into an electrical outlet
- Turn on the column. It will scroll through an automatic color sequence until the wireless remote is activated
- The Wireless Remote can now be used to control the column. Each button delivers a program

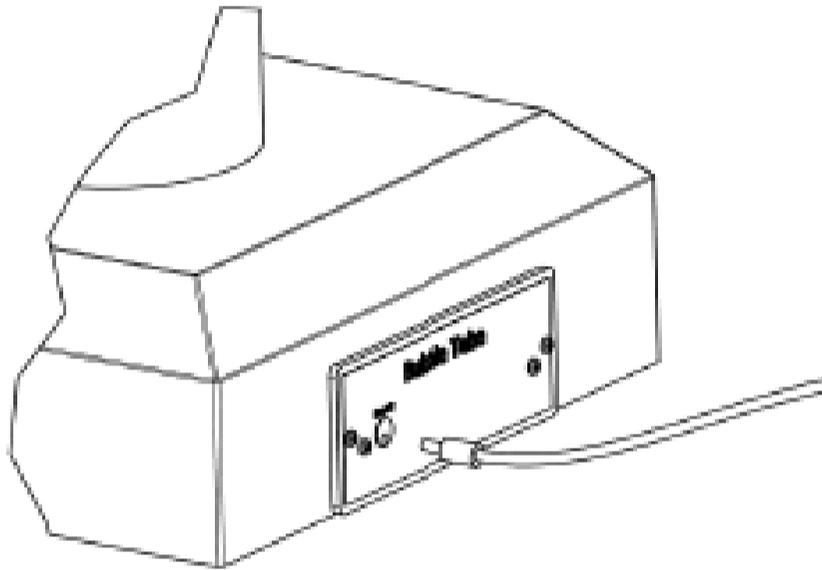

Wireless Remote


The Wireless Remote uses radio technology allowing for an amazing wireless experience. There are eight buttons on the switch. If a switch is not pressed for 5 minutes, it will revert to an automatic sequence. The remote turns itself off when not in use.

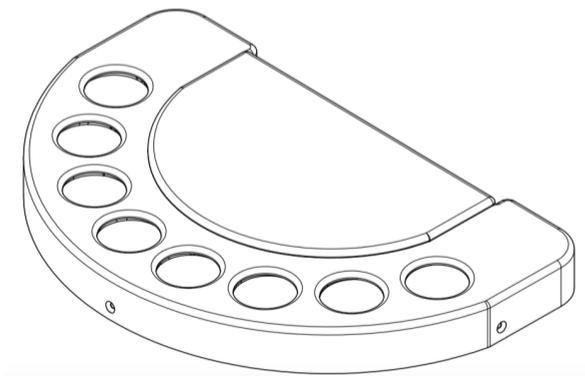

- Red Button - Turns the column red
- Yellow Button - Turns the column yellow
- Green Button - Turns the column green
- Blue Button - Turns the column Blue
- Button 5, 6, 7 - Automatic program
- Button 8 - All Off

Charging the Wireless Remote

Plug the power cord into an electrical outlet. Plug the other end of the power cord into the back of the wireless remote.

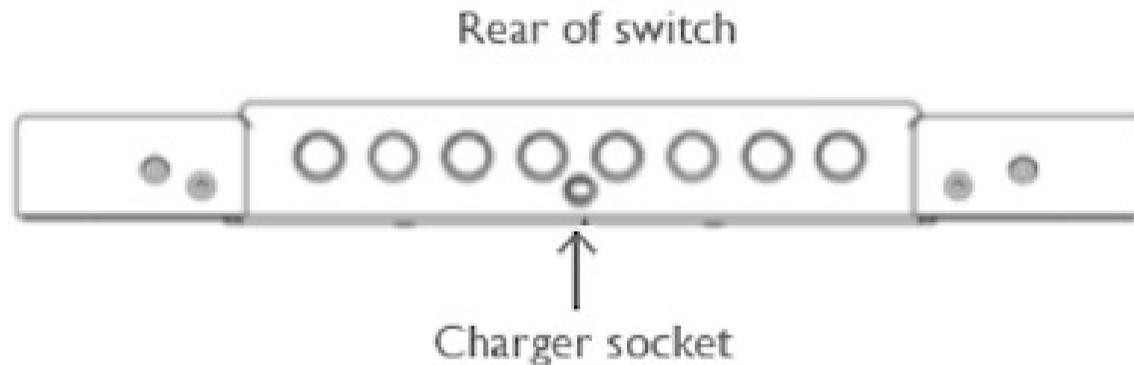


The remote has a LED light on the underside with battery life and transmission data:

- Five short yellow flashes after a button is pressed indicates low battery
- Steady yellow light indicates the charger is connected and the remote is successfully charging
- Steady green light indicates the charger is connected and the remote is fully charged
- Flashing red light when any button is pressed, indicates the signal is not being received

Wireless Remote Inputs

The rear of the remote has 8 x 6.3mm jack sockets. This allows users to plug in their favorite remote. These sockets are numbered from left to right (1 through 8). The remote must be volt free and normally open.

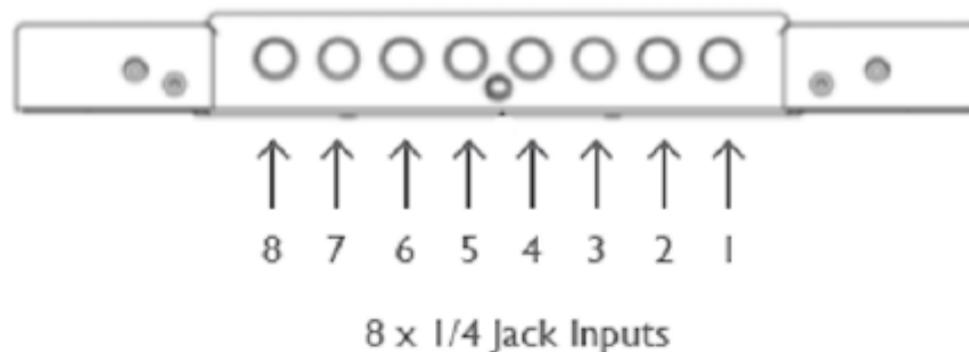

Wireless Remote Reset

The Wireless Remote can occasionally crash or glitch. To reset the remote, a reset button is clearly marked on the underside of the remote. Press a ball point pen into the reset switch, hold for 5 seconds and release. The remote will re-boot.

Trouble Shooting

Q - The remote will not work.

A - Check the LED indicator on the bottom of the remote. If nothing is illuminated when pressing the buttons. Reset the remote and charge for 12 hours.

Q - The LED is flashing red, but the remote won't work.

A - The remote is working, but the receiving equipment is faulty or not turned on. Make sure the equipment is turned on.

Q - My remote is fully charged and reset, but the status LED will not illuminate.

A - There is a problem with the charger. Please contact us for further assistance.

The remote should be checked every two years for correct operation and battery replacement. For service and technical advice contact us.

Guarantee

CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period (as shown in 8 below) the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts thereof) repaired or at our discretion replaced free of charge.

1. The appliance shall have been purchased and used solely in accordance with Standard operating instructions and the technical and/or Safety Standards required in the country where this appliance is to be used
2. All enquiries must be through such dealers. For appliances used in the UK., U.S.A., Channel Islands, Isle of Man, and Republic of Ireland the appliance should be returned together with this guarantee and proof of purchase promptly on being found defective, at the purchasers risk and expense, to the authorised dealer from whom the appliance was purchased.
3. This guarantee shall not apply to damage caused through fire, accident, misuse, Wear and tear, neglect, incorrect adjustment or repair, to damage caused through where this appliance is used, or to damage occurring during Installation, adaptation, modifications, or use in an improper manner or inconsistent with the technical and/or safety standards required in the country transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by a person not authorised by us, the purchaser shall not be entitled to any rights and/or remedies under this guarantee.
5. The purchaser sole and exclusive remedy under this guarantee against us is for the repair (or at our discretion the replacement) of the appliance or any part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to lamps, batteries, colour filters, cabinet parts or any other parts of a limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or Defective part which has been replaced shall become our property until paid for in full.
8. The guarantee period applicable to all new appliances shall be 24 months.

Technical

The Waterless Color Column is a low voltage device using a power supply that is double insulated. A class 2 device does not require portable appliance testing. Please complete an annual visual inspection looking for any damaged parts.

Electrical data

Supply Voltage	110 / 240	AC
Power Supply Primary Voltage	110 / 240	AC
Power Supply Secondary Voltage	5	DC
Power Supply Current Rating	6	Amp
Power Supply Plug top Fuse	3	Amp
Working Load Current	2	Amp
Power Supply Compliance	EN-FCC	

Complies to:
BS EN 60355-1
Generic EMC standards -
Emission standard for residential, commercial and light-industrial environments

The Waterless Color Column power supply is fitted with a 3 Amp fuse . Disconnect the power supply before attempting to replace .

Column - 65.3"L x 6" Diameter
(1659mm x 152.4mm Diameter)
Base - 15.7"L x 15.7" x 5.5"H
(398.8mm x 398.8mm x 139.7mm)
Weighs 35 lbs. (16 KG)

Disclaimer

No part of this manual may be reproduced in any form or by any means (graphic, electronic or mechanical, including recording, taping, photography or information retrieval system) without express written permission of the publisher of this material.
All information is correct at date of publication.



fun & function
EMPOWERING DIFFERENT®

PO Box 11, Merion Station, PA 19066

QUESTIONS? call us at 800-231-6329 or email us at customercare@funandfunction.com.
We are committed to going above and beyond to address your questions, ideas and feedback.



SpaceKraft copyright August 2022