 


Sound Activated Light Up Wall Panel

SP7172

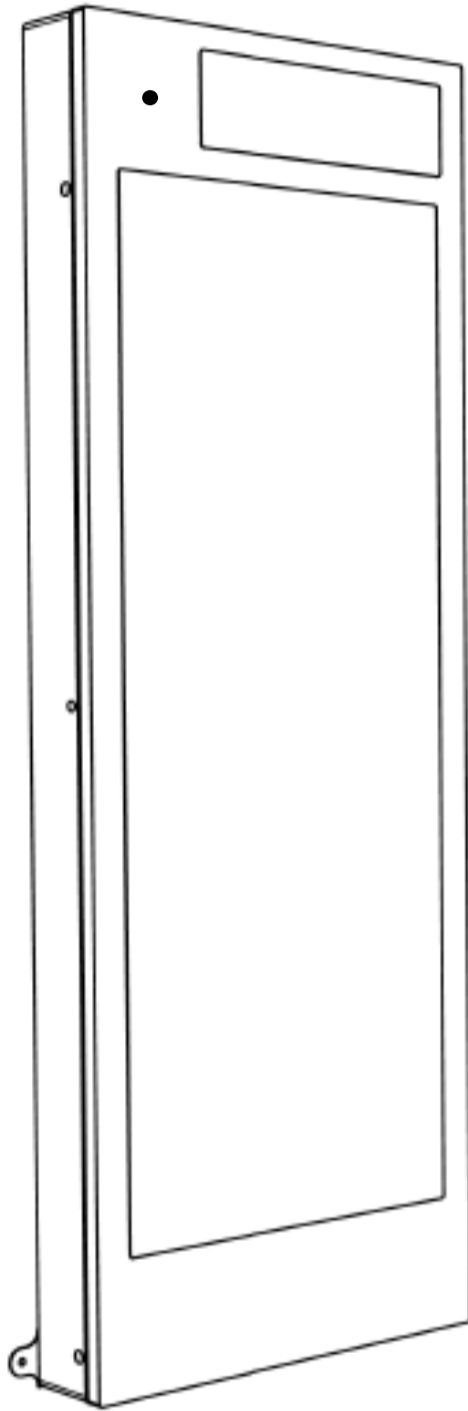

Installation Manual

40250
July 2022



Contents

Warnings	3
Description	3
Includes	3
Installation	4-6
Operating Panel	7-10
Troubleshooting	11
Cleaning	11
Maintenance	11
Information	12
Guarantee	13
Technical	14
Contact	14



 
Warnings

- * This product is designed for users with special needs. Adult supervision is required during use at all times.
- * For indoor use only. The equipment uses a mains power supply.
- * This product was not designed to be free standing. It must be attached to a wall.
- * Turn off the panel when cleaning. Use a mild detergent and a lint free cloth. Never use abrasive cleaning pads to clean this item.

Description


Make your sensory room glow with the sound of your voice! Clap your hands, use your voice or play music to activate the LED lights. The built-in microphone picks up sound, bringing the panel to life and illuminating the room with 12 levels of vibrant colors. You can also use the handheld microphone! Set different programs and adjust the speed, fade and sensitivity of the sensory lighting. Use to encourage speech and vocalization. Long-lasting LED lights have 30,000 hour life.

Includes

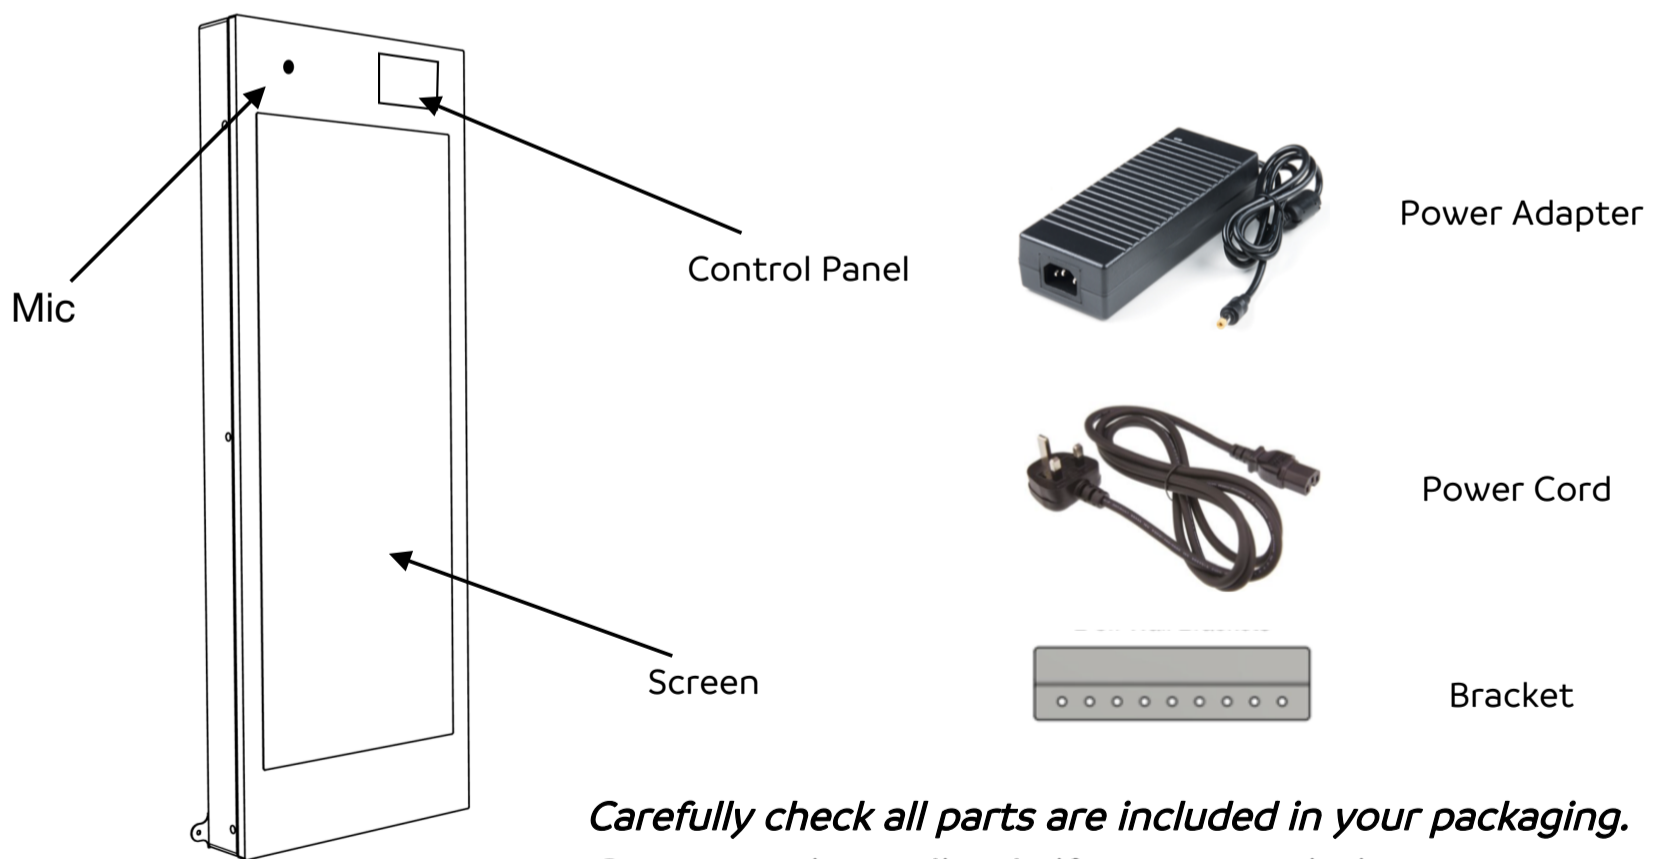


Installation

 
The Sound Activated Light Up Wall Panel is designed to be installed on the wall with the supplied bracket. Screws should be used that are recommended for the type of wall the panel will be installed (screws are not included). The Sound Activated Light Up Wall Panel weighs 44 lbs. (20 KG). Professional installation is recommended. The panel should be installed close to an electrical outlet.

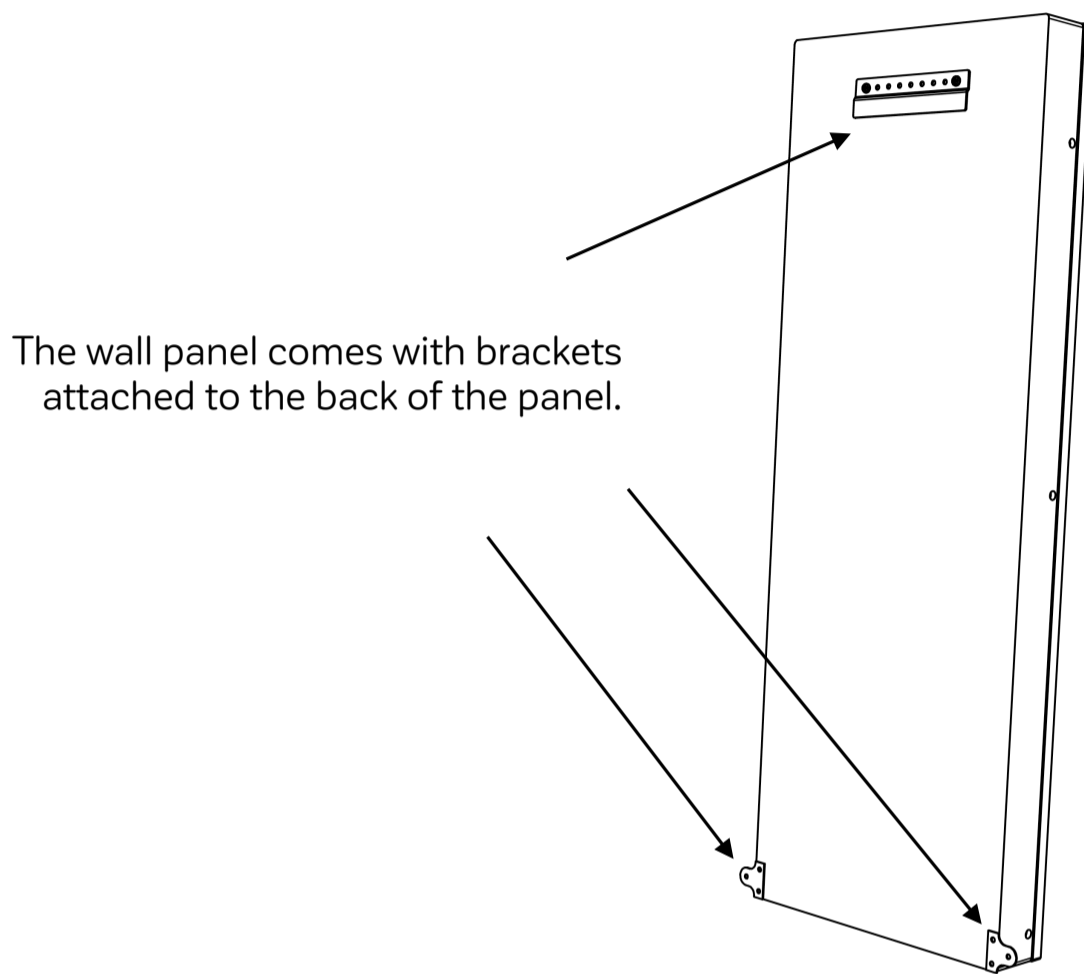

 
Step 1 Screw the bracket into the wall.

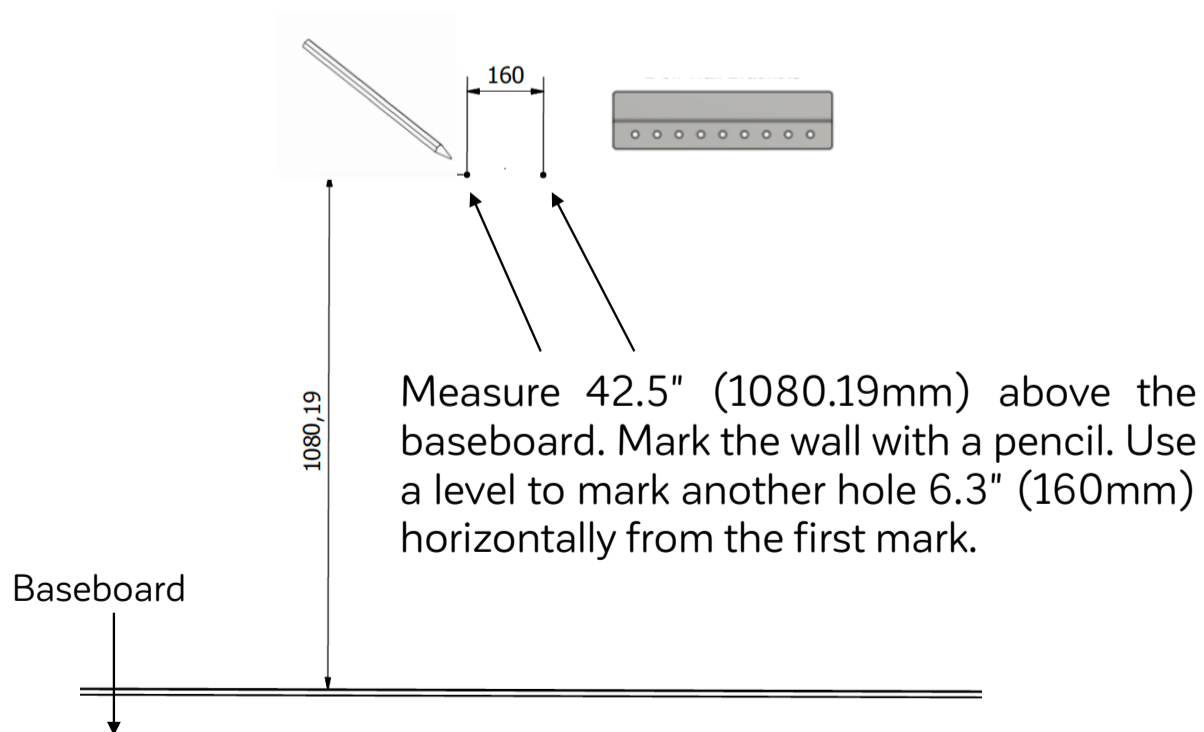

 
Step 2 Drill 2 x holes and screw bracket to wall using appropriate hardware.

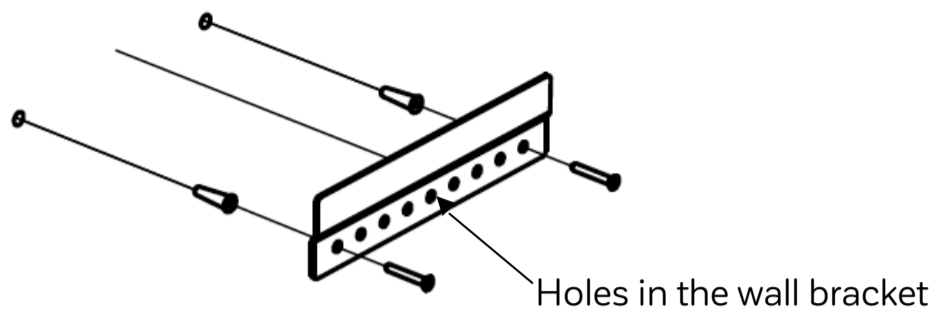

 Step 3 Place the Sound Activated Light Up Wall Panel onto the wall bracket. Hook the bracket located on the back of the panel onto the wall bracket. Note: Lift the panel gently and set slowly into place until the brackets are securely connected.

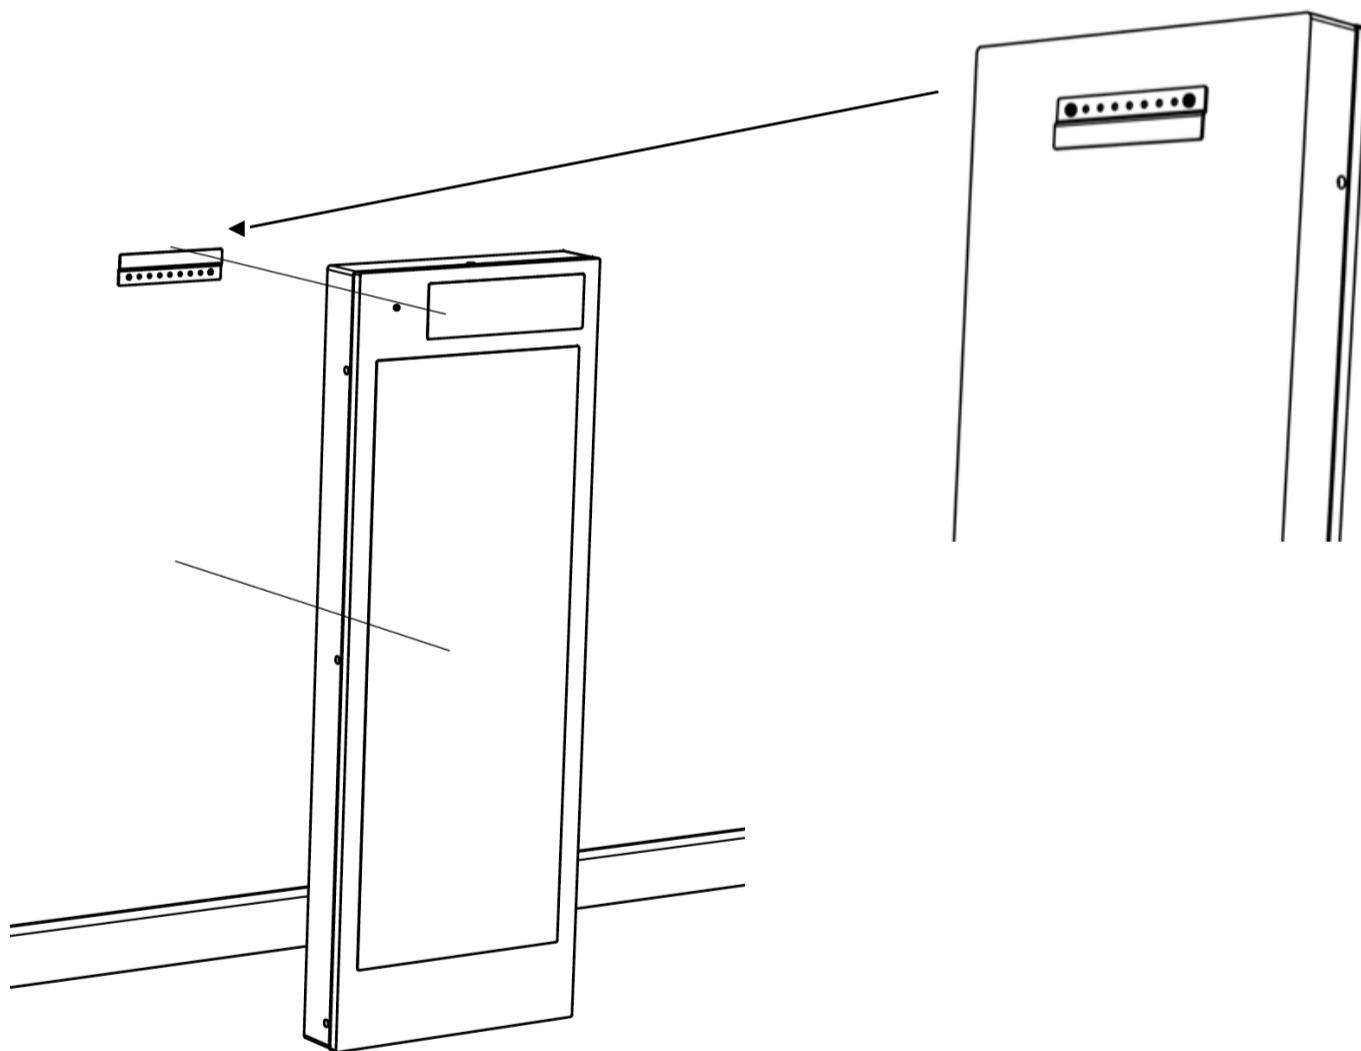

 Step 4

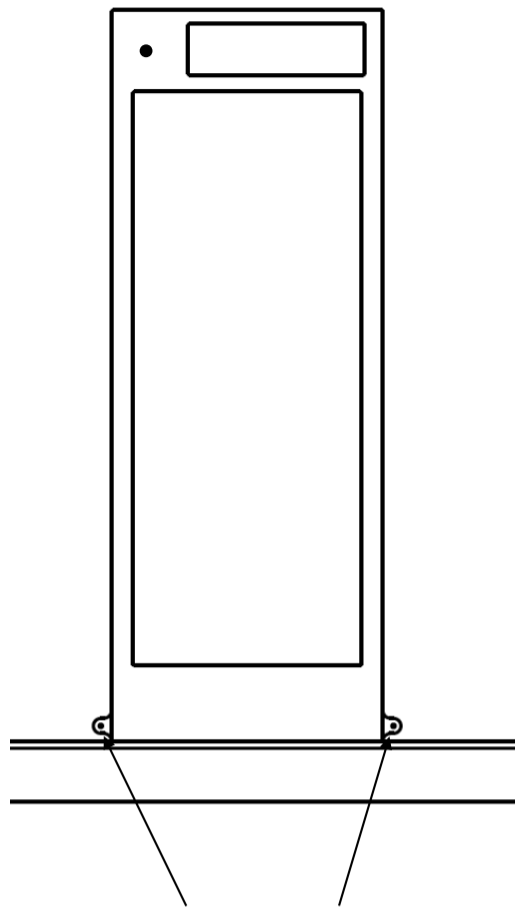

Mark through the holes on the bottom brackets using a pencil.

Drill holes into the wall and use appropriate hardware to screw the panel onto the wall. These brackets stop the panel from being lifted off the wall bracket.

Connecting the Power

 
- Connect the power adapter to the socket on the left side of the panel

Power Adapter



- Connect the power cord to the power adapter and plug into the outlet

Power Cord

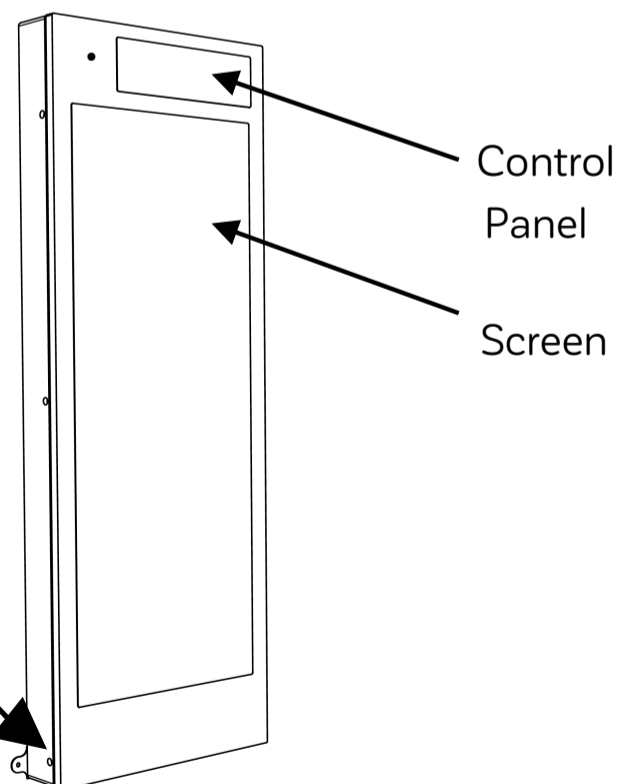

Control Panel

 
Screen

Operating Panel


Front Panel

The front panel uses a touch sensitive LCD display and has no moving parts. Your display may look different due to our constant upgrading of firmware. The display is self-explanatory. Turn on the panel using the Power/Standby button and play!

Start up splash display

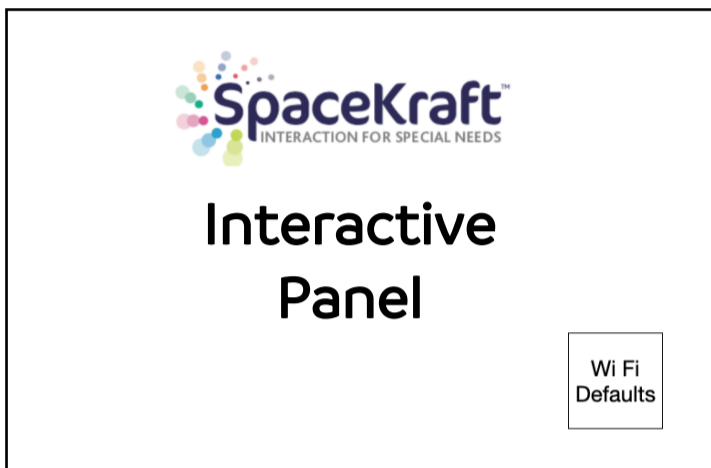


Program menu

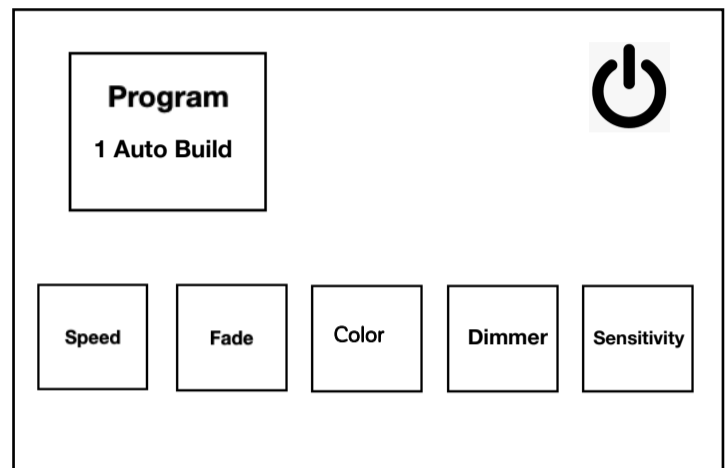 

When power is supplied to the Sound Activated Light Up Wall Panel, the splash panel is displayed and quickly goes to the program menu.

The program menu may not look like this. It depends on the last program used when the power is turned on.

 Button Description

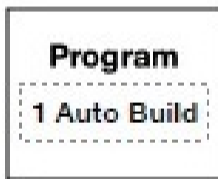

Program - Press this button to access the program menu. Press this to gain access to all the programs.



Speed - Press this button to activate the speed of any automated program.



Fade - Press this button to alter the fade time in between colors.

 


Color - Press this button to alter the display panel color.



Sensitivity - Press this button to adjust the microphone sensitivity.


Programs and how to change them

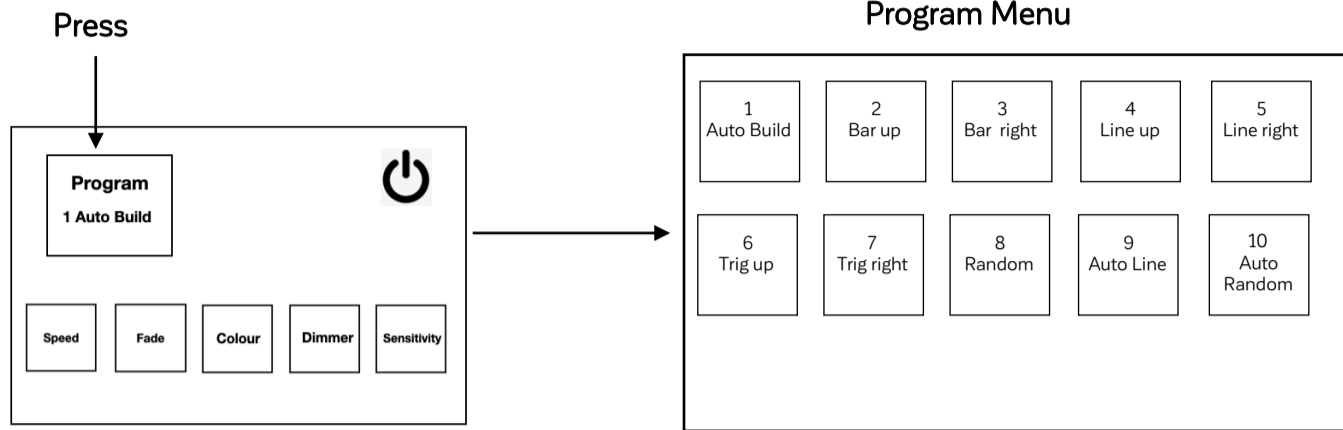

Press one of the buttons to choose a program


Adjusting the speed - Some programs may work better if the speed is adjusted.

 Speed - Press this button to adjust the speed.

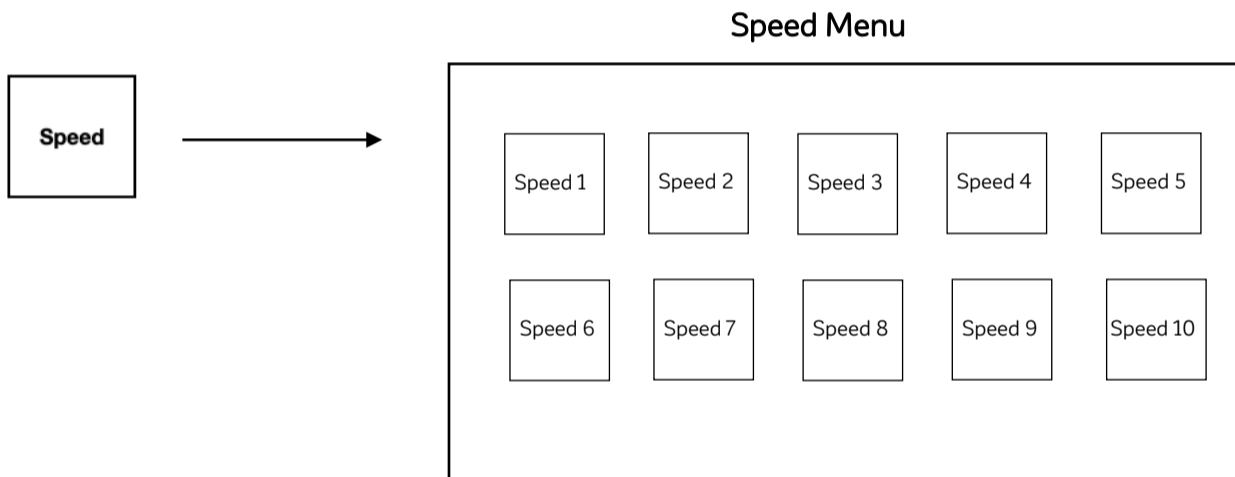


Press one of the buttons to change speed - 1 being slow

 Fade - Press this button to alter the fade time in-between colors.

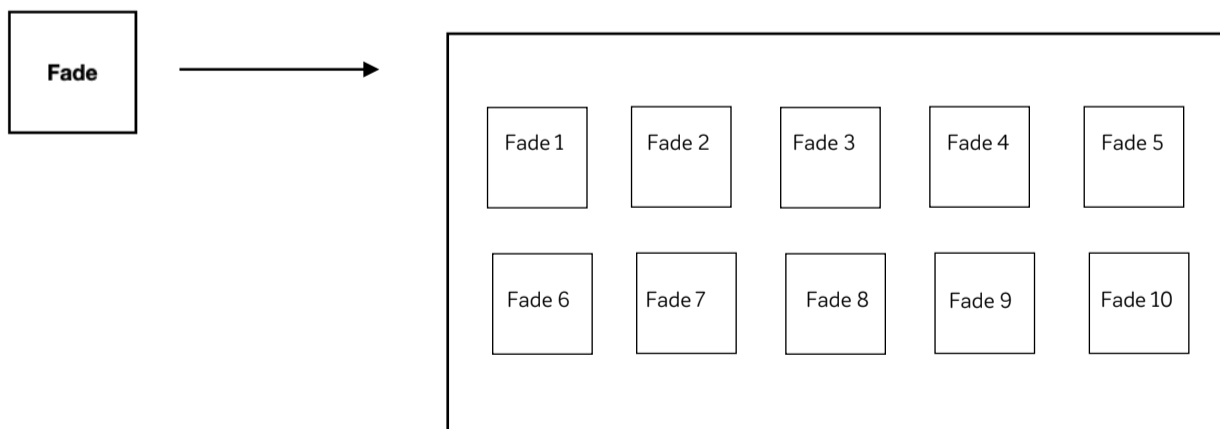


Press one of the buttons to change Fade time - 1 being fast

 Colors - Some programs will allow a choice of color options.

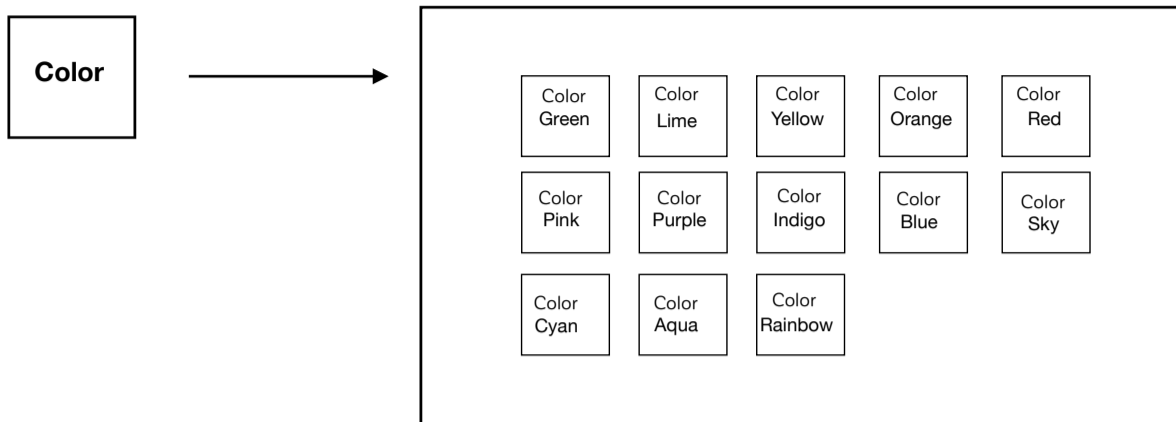


Press one of the buttons to change display color

 Brightness - Press this button to adjust the brightness.

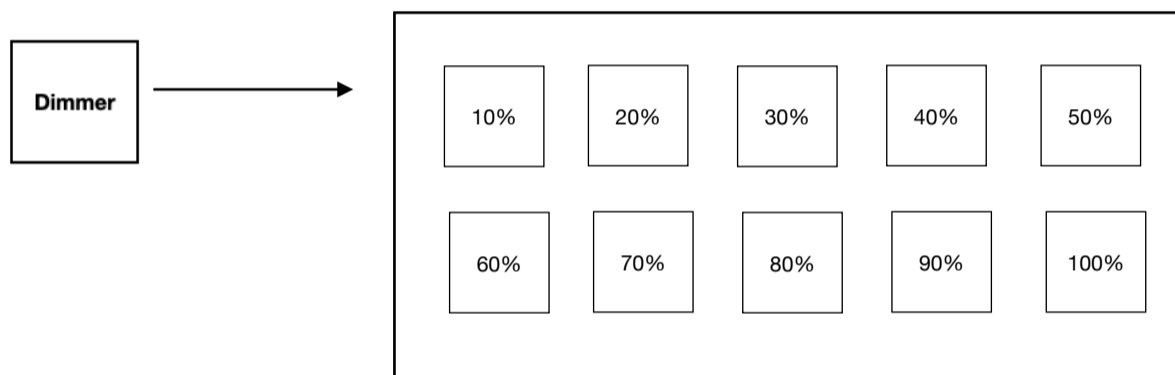

Press one of the buttons to change brightness - 10% being low.

 Sensitivity - Press this button to alter the sensitivity of the microphone.

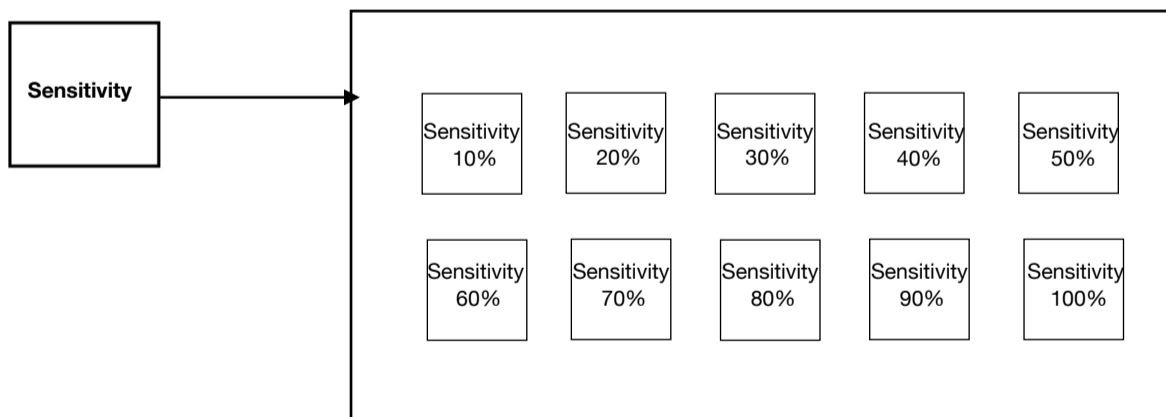


Press one of the buttons to change the sensitivity - 10 % being the least.


Using the Sound Activated Light Up Wall Panel

Choosing a program

 Press the program button to move into the program menu and choose a program

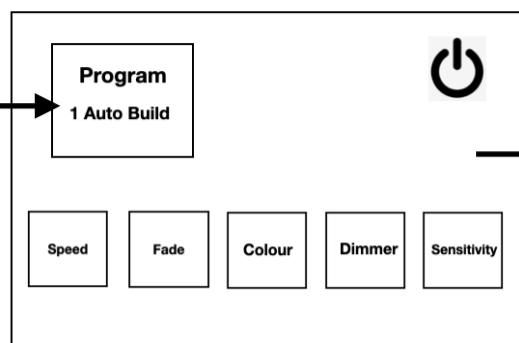


Program Menu

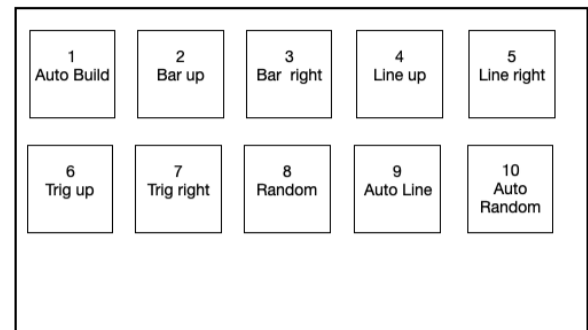 


Press one of the buttons to choose a program

Programs

 
All the programs require users to touch the screen

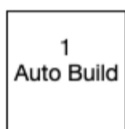

 
This program is automatic and requires no noise to activate. Use the speed, fade, color, dimmer to change how the program reacts.

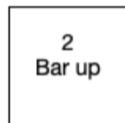

 
Make a noise and watch the display move up and down and leave a trail of color as it rises. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

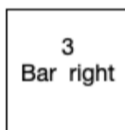

 
Make a noise and watch the display move up from left to right vertically. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

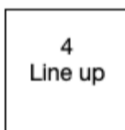

 
Make a noise and watch the display move up and down in small segments of light. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

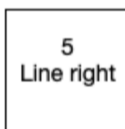

 
Make a noise and watch the display move left to right vertically with a trail of color. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

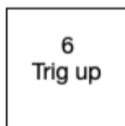

 
Make a noise and watch the display rise and climb in steps as you make another noise. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

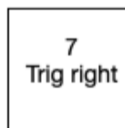

 
Make a noise and watch the display move left to right in steps as you make another noise. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

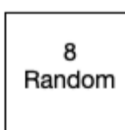

 Make a noise and watch the display move randomly with no set pattern. Use the speed, fade, color, dimmer and sensitivity to change how the program reacts.

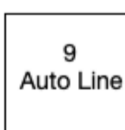

 This program is automatic and requires no noise. Steps move up and down the display. Use the speed, fade, color, dimmer to change how the program reacts.

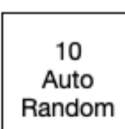

This program is automatic and requires no noise. Lights move at random Use the speed, color, dimmer to change how the program reacts.

Troubleshooting

Q - My **Sound Activated Light Up Wall Panel** display is completely blank and nothing lights up.

A - Check the power supply is turned on and the power cord is plugged in. If this still does not light up, check the fuse in the plug.

Q - The display is not reacting to my sounds.

A - Make sure the sensitivity is turned up and the program works with sound.

Q - The display was illuminating but they have gone off. Looks like everything has locked out.

A - Disconnect the power supply for 30 seconds and power back up. If the problem persists, contact SpaceKraft.

Cleaning

To clean your **Sound Activated Light Up Wall Panel**, wipe with a soft white cloth and mild detergent. Never use an abrasive cloth or any solvent such as mineral spirits or chlorine based products. Always unplug the power cord when cleaning.

Maintenance

Your **Sound Activated Light Up Wall Panel** requires no maintenance except a visual inspection for a damaged front panel or case. Periodically, check all wall attachments and make sure the panel is secure. Make sure all electrical cords are not damaged and still intact.

Information about products that generate electrical noise

USA and Canada

This device complies with FCC and industry Canada RF radiate exposure limits set forth for general population. It must not be colocated or operating in conjunction with any other antennas or transmitters.

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions.

This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Should problems occur reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect to a power outlet on a circuit different from that to which the receiver is connected.



Guarantee

CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period (as shown in 8 below) the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts thereof) repaired or at our discretion replaced free of charge.

1. The appliance shall have been purchased and used solely in accordance with Standard operating instructions and the technical and/or Safety Standards required in the country where this appliance is to be used.
2. All inquiries must be through such dealers. For appliances used in the UK., U.S.A., Channel Islands, Isle of Man, and Republic of Ireland the appliance should be returned together with this guarantee and proof of purchase promptly on being found defective, at the purchasers risk and expense, to the authorized dealer from whom the appliance was purchased.
3. This guarantee shall not apply to damage caused through fire, accident, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through where this appliance is used, or to damage occurring during Installation, adaptation, modifications, or use in an improper manner or inconsistent with the technical and/or safety standards required in the country transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by a person not authorized by us, the purchaser shall not be entitled to any rights and/or remedies under this guarantee.
5. The purchasers sole and exclusive remedy under this guarantee against us is for the repair (or at our discretion the replacement) of the appliance or any part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to lamps, batteries, color filters, cabinet parts or any other parts of a limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or defective part which has been replaced shall become our property until paid for in full.
8. The guarantee period applicable to all new appliances shall be 24 months.

Technical

The **Sound Activated Light Up Wall Panel** is a low voltage device using a power supply that is double insulated. A class 2 device and does not require portable appliance testing. We do however suggest an annual visual inspection looking for any damaged parts.

Electrical data

Table 1

Supply Voltage	110 / 240	AC
Power Supply Primary Voltage	110 / 240	AC
Power Supply Secondary Voltage	12	DC
Power Supply Current Rating	3	Amp
Power Supply Plug top Fuse	3	Amp
Working Load Current	1.2	Amp
Power Supply Compliance	EN-FCC	

Complies to:
BS EN 60355-1
Generic EMC standards -
Emission standard for residential, commercial and
light-industrial environments

In the UK, the **Sound Activated Light Up Wall Panel** power supply is fitted with a 3 Amp fuse. Disconnect the mains supply before attempting to replace .

Size - 47.8" x 17.7" x 3.5"
(1215 mm x 450 mm x 90 mm)
Weight - 44 lbs. (20 KG)

Disclaimer

No part of this manual may be reproduced in any form or by any means (graphic, electronic or mechanical, including recording, taping, photography or information retrieval system) without express written permission of the publisher of this material.
All information correct at date of publication.



fun & function
EMPOWERING DIFFERENT®

PO Box 11, Merion Station, PA 19066

QUESTIONS? call us at 800-231-6329 or email us at customercare@funandfunction.com. We are committed to going above and beyond to address your questions, ideas and feedback.

