

Color Changing Light Panel with SensaSoft™ Panel and Platform

SP8607, SP8608



Installation Manual

82710
August 2022



Contents

Warnings	3
Description	3
Includes	4
Installation	5-8
Cleaning, Maintenance, Technical	8
Guarantee	9
Contact	10




Warnings

- * This product is designed for users with special needs. Adult supervision is required during use at all times.
- * For indoor use only. The equipment uses a mains power supply.
- * Do Not use the wall panel free standing. It should be installed securely to the wall.
- * Never use abrasive cleaning pads to clean this item.
- * The SensaSoft platform is designed to support no more than 275 lbs. It is designed for one person at a time.


Description

Multi-colored and multi-sensory fun! With four different colors and sixteen different modes, the Color Changing Light Panel creates an engaging sensory experience for kids of all ages. Illuminate your sensory space with a variety of vibrant lights and settings. Choose the sound responsive mode to enable kids to control the colors using their voice or by making any sound. The remote control is another fun way to play with the wall panel. It encourages eye-tracking and color recognition, and is fantastic for non-verbal users too.

Your SensaSoft wall panel and platform are part of a wide range of floor cushions and interlocking products that provide multiple configurations (additional pieces can be purchased at a later date). The wall panel attaches to the wall using the supplied brackets. The platform sits on the floor and attaches to the wall panel with Velcro tabs. This keeps the platform from slipping away from the wall panel.

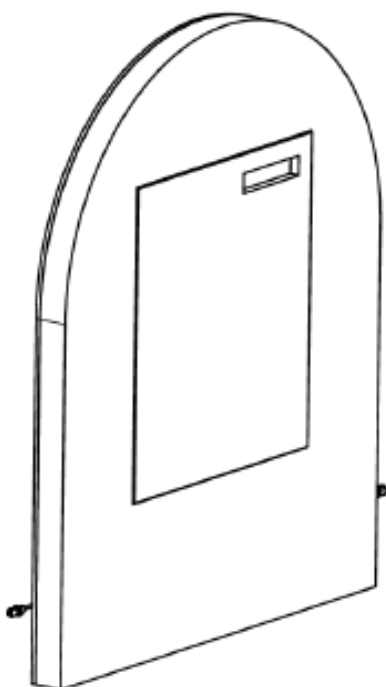

SensaSoft Wall Panel


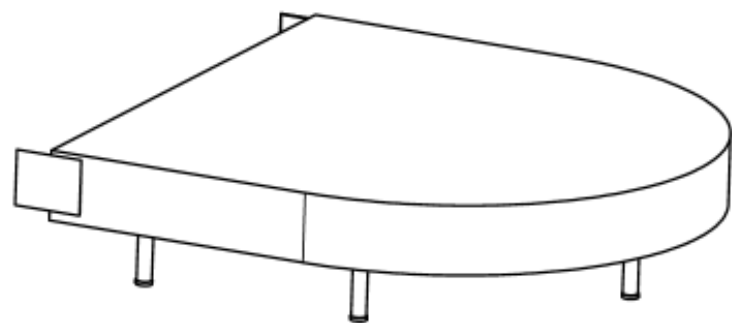


SensaSoft Platform

Includes

The wall panel and platform will be packaged separately.

 Wall Panel

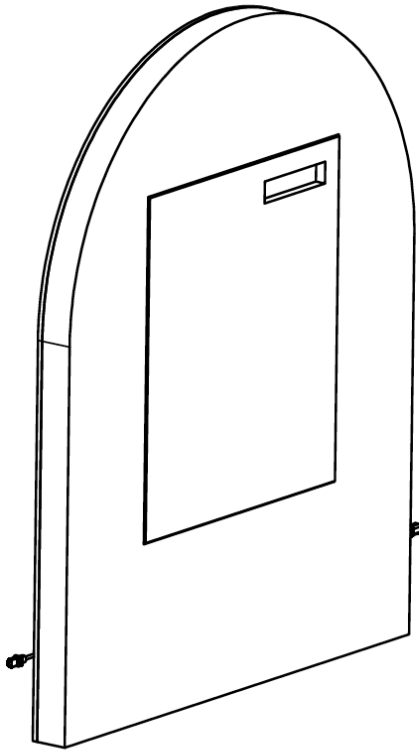


2 x Wall Brackets - 1000 mm

Power Cord



Platform

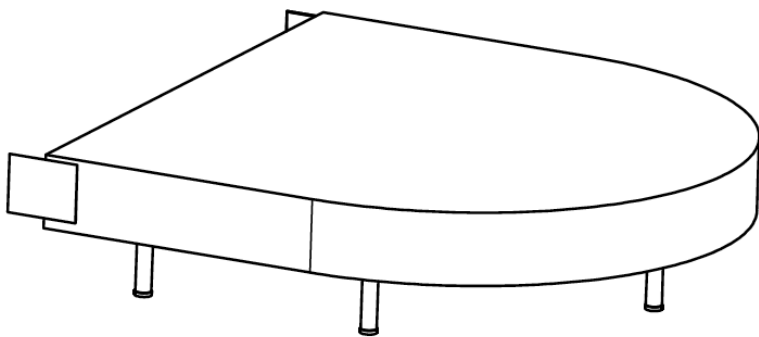

Installation

The wall panel must be installed against a permanent wall of solid construction. An electrical outlet is required to make your panel work. The panel should be located near an electrical outlet. Brackets are supplied without screws or bolts. Proper screws or bolts will depend on the type of wall the panel will be attached to. It is recommended the wall panel is installed by a professional using the correct hardware to secure the panel to the wall.

Note: The brackets do not support the weight. The wall brackets stop the panel from tipping.


The illustrations provided are showing a typical method using screws and hardware for a solid brick wall.

Step 1

Using a level, place the wall bracket to the wall making sure the brackets are level. Use a pencil to mark through the holes in the bracket to the wall. The top bracket hole centers should be exactly 33.5 inches (85cm) above the floor and bottom bracket 14 inches (35.6cm). We suggest a minimum of 3 holes in each bracket.

Step 2

Drill Holes and use at least 3 screws or bolts to attach the brackets to the wall

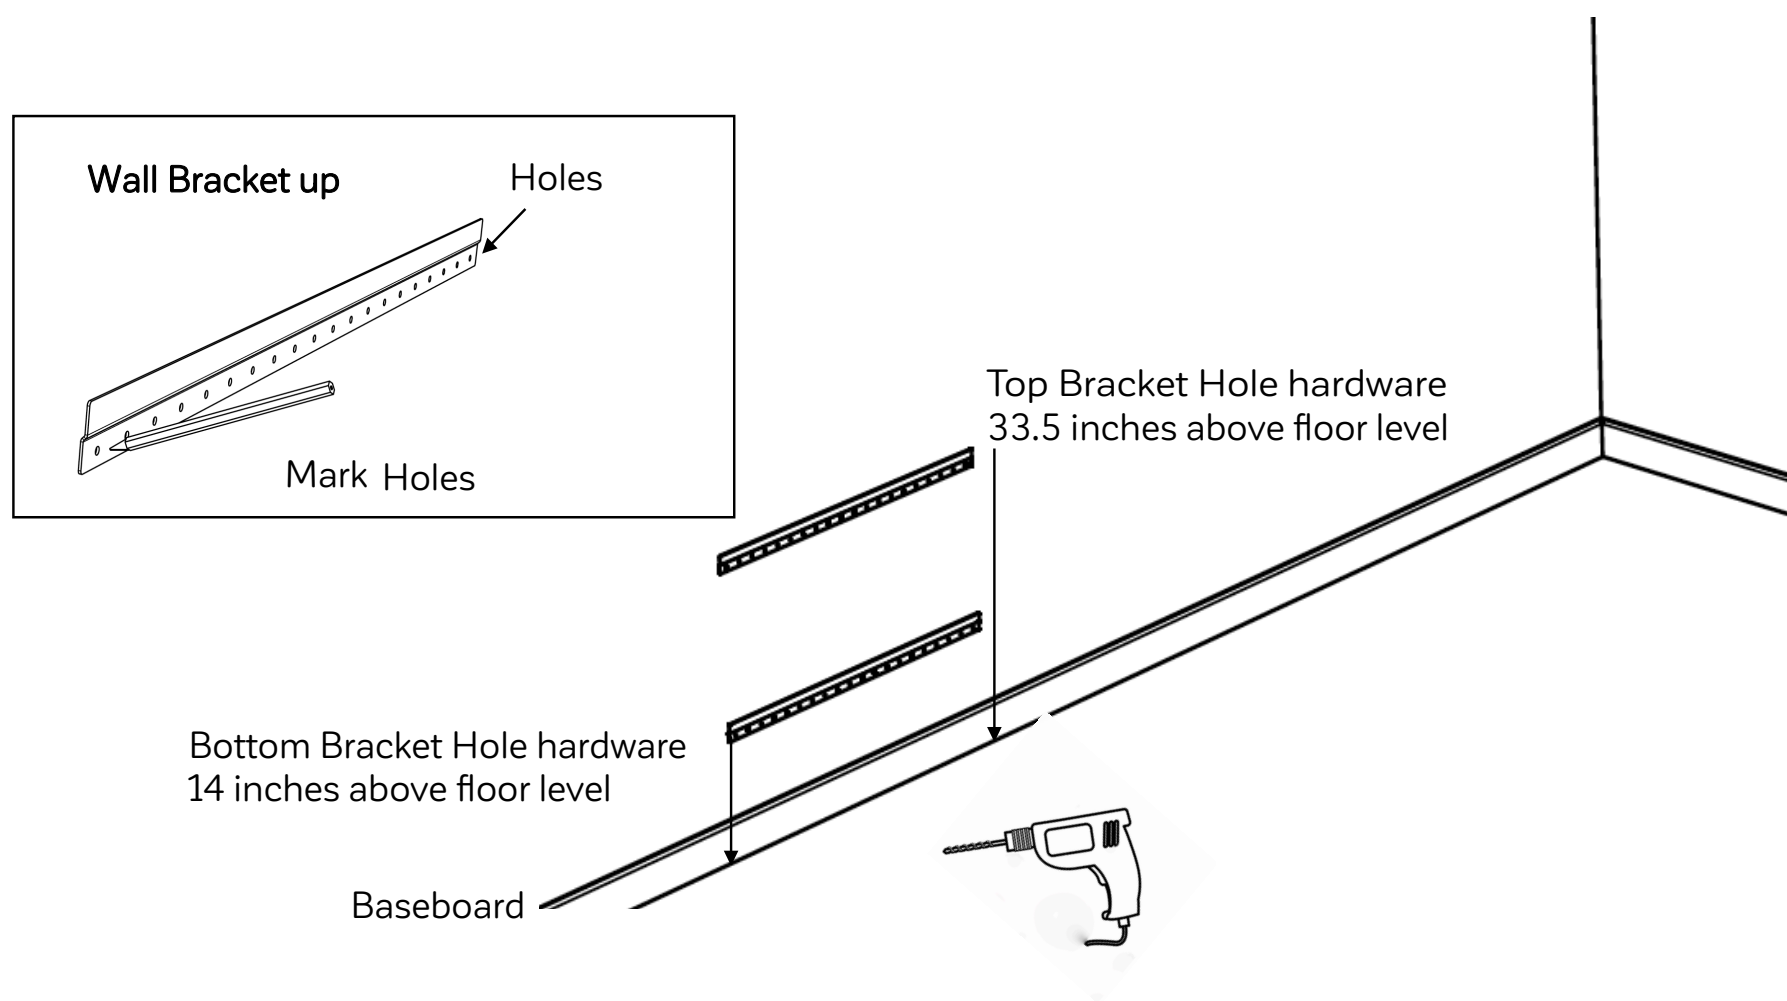




We recommend two people to lift the panel onto the wall brackets.


Step 3

Identify the three brackets on the rear of the wall pad and lift on to the wall brackets. The panel should stand on the floor if fitted correctly. The brackets stop the panel from tipping.

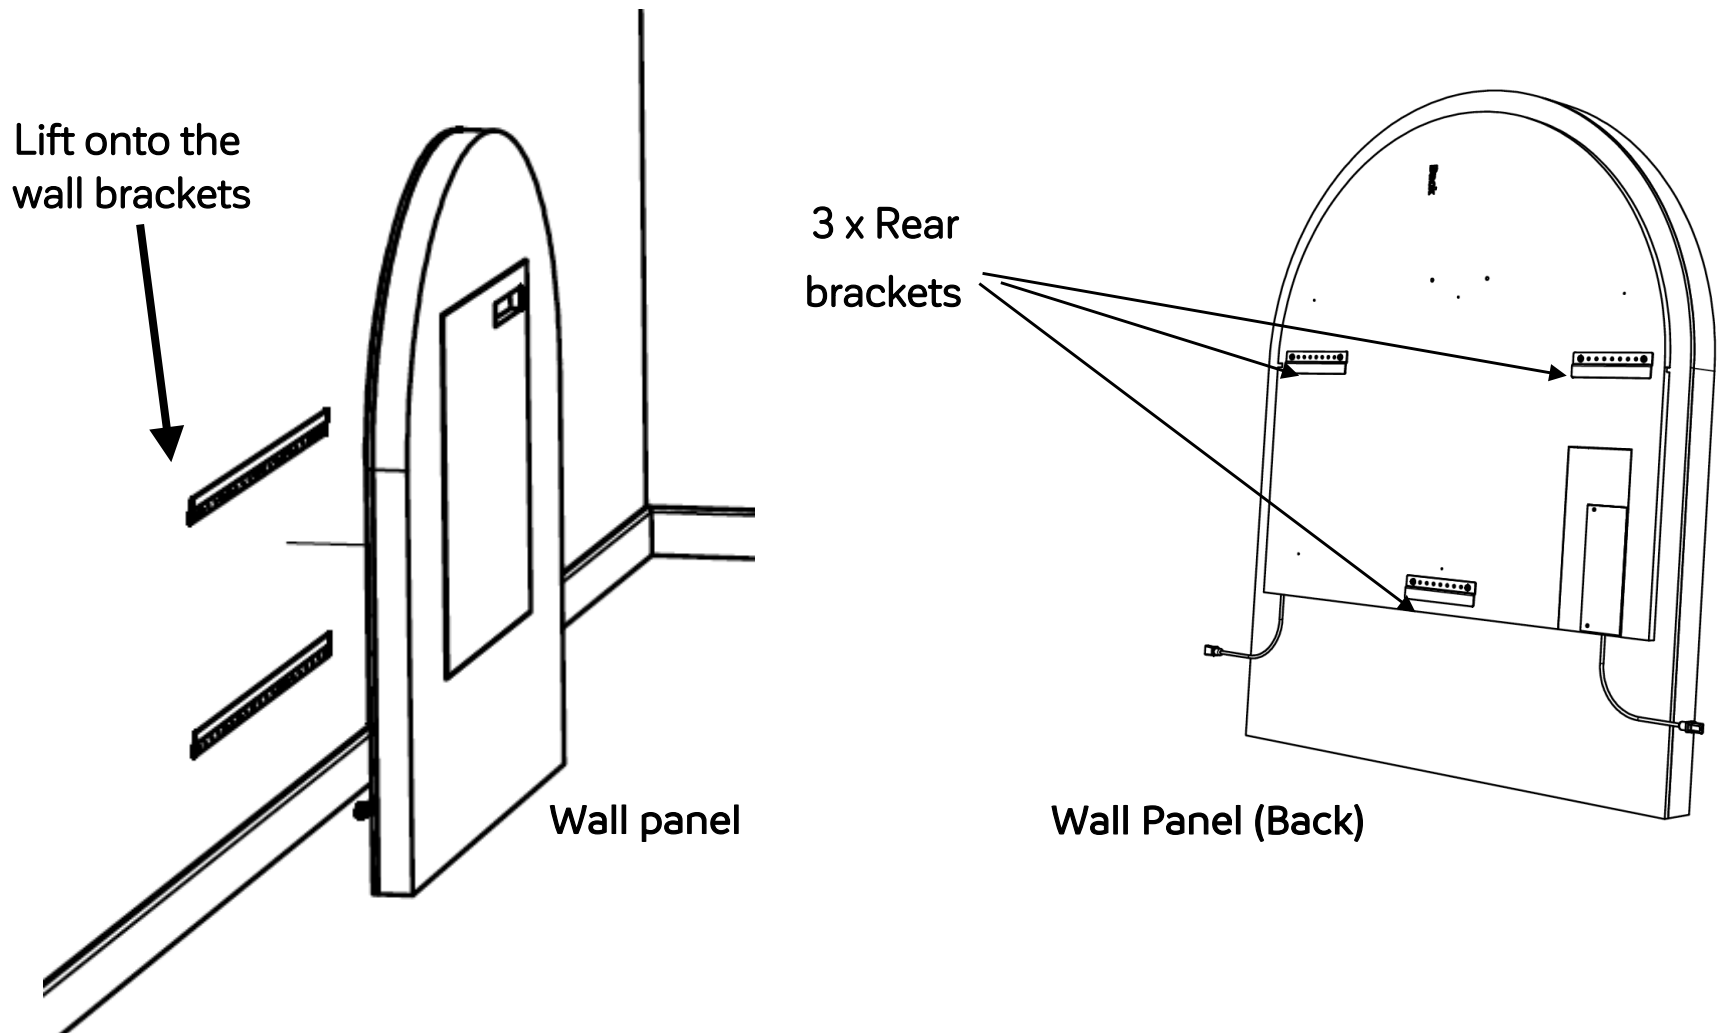


Step 4

- The platform arrives with the legs unattached.
- Remove the screws placed in the platform. Set them aside, you will need them.
- Place the legs in the positions shown.
- Using the same screws, secure the legs.

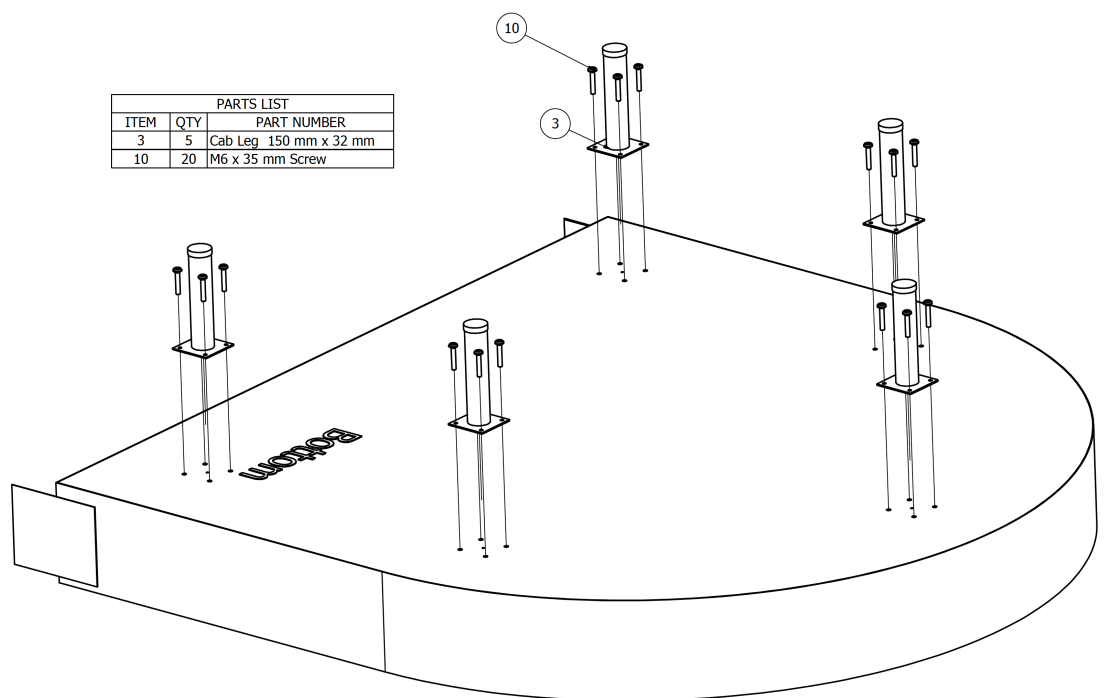


Step 5

Push the platform to the wall panel and attach the two Velcro strips to the side of the wall panel.

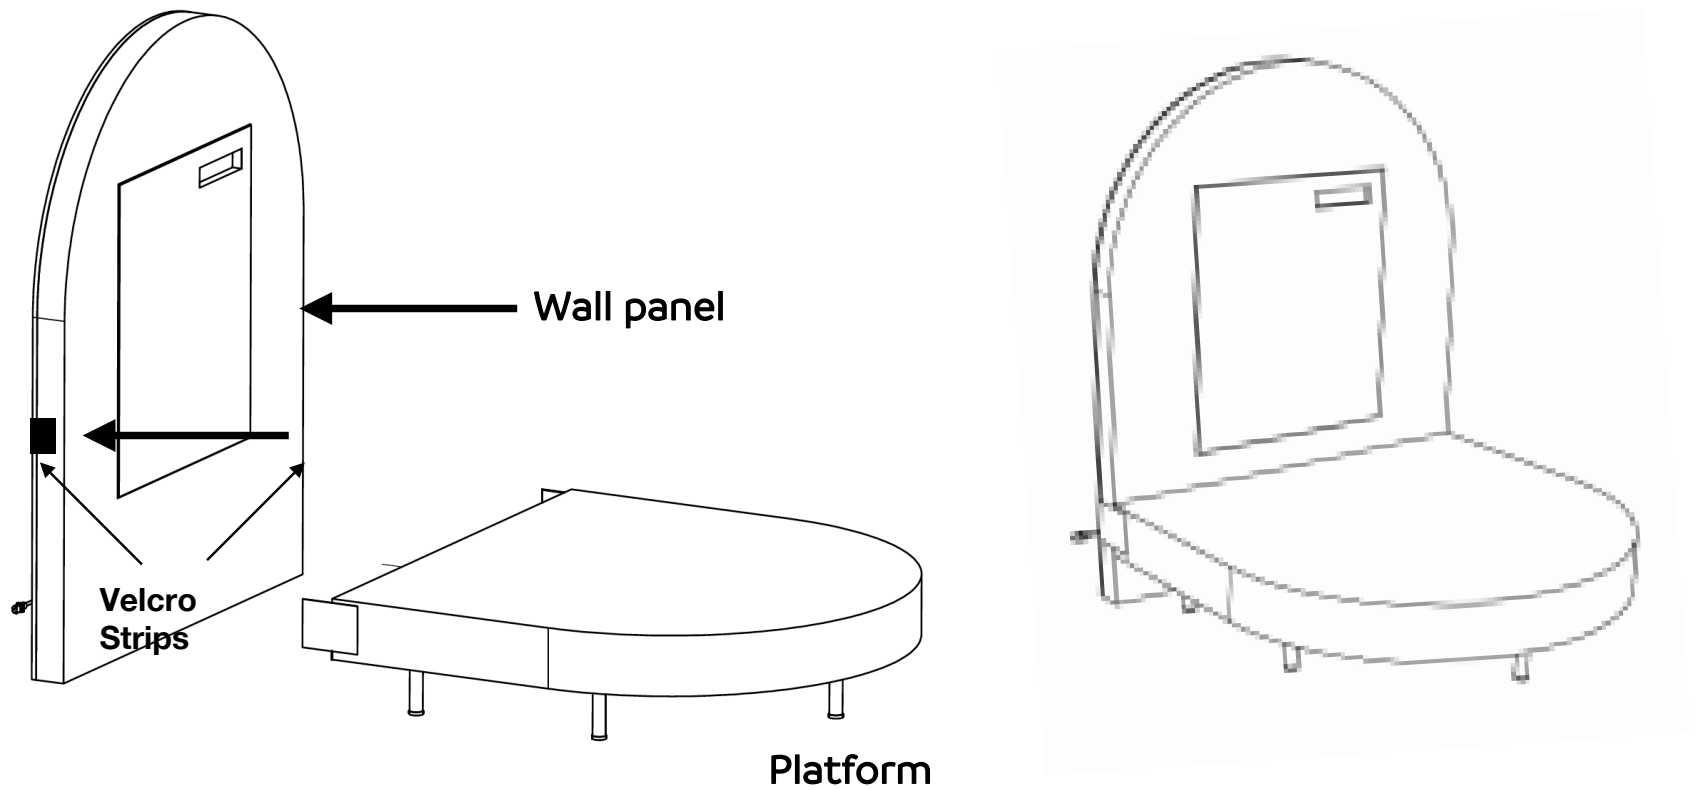


Connecting to the Main Power Supply

Your wall panel is fitted with a Sensory panel. This requires an electrical outlet. You are supplied with a power cord. This plugs into the socket to the right side of your wall panel. Connect the supplied cord and plug into an electrical outlet. You are now ready to use your SensaSoft product.

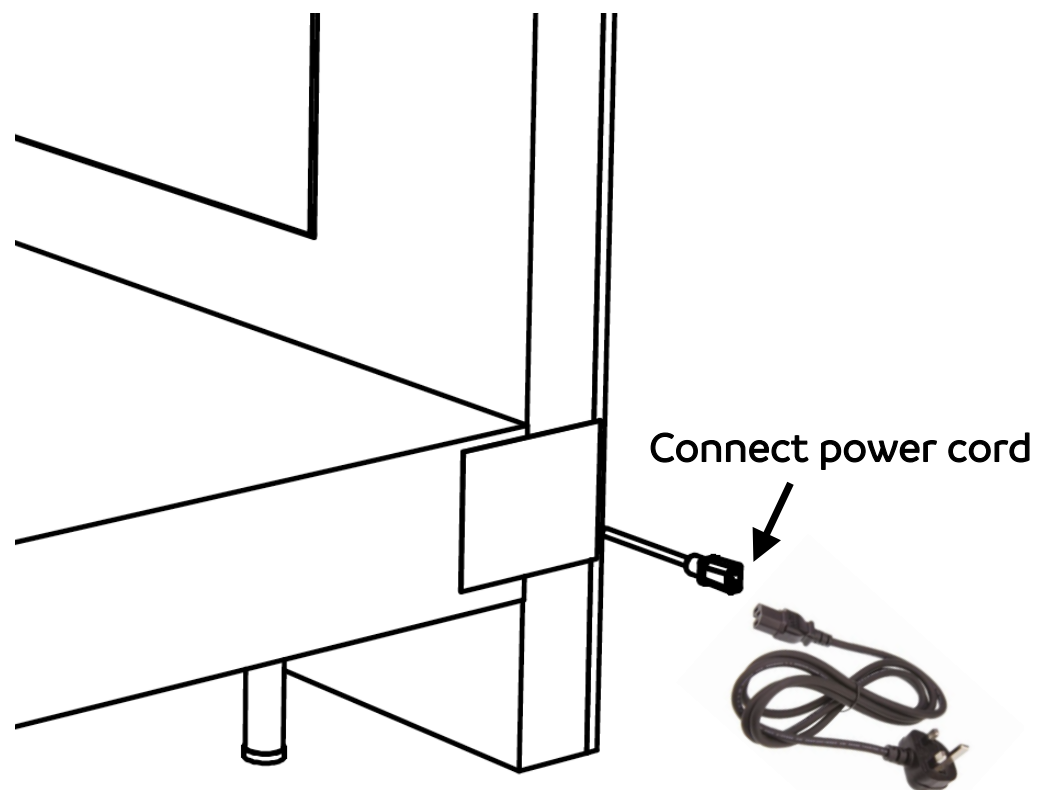

Connecting other SensaSoft Products

Every SensaSoft panel has an auxiliary cord to connect power to other SensaSoft panels. The entire range can run from one power outlet. To connect more panels, use the cord to the left of the wall panel. If this cord is not being used, tuck it behind the panel so it cannot be tampered with.

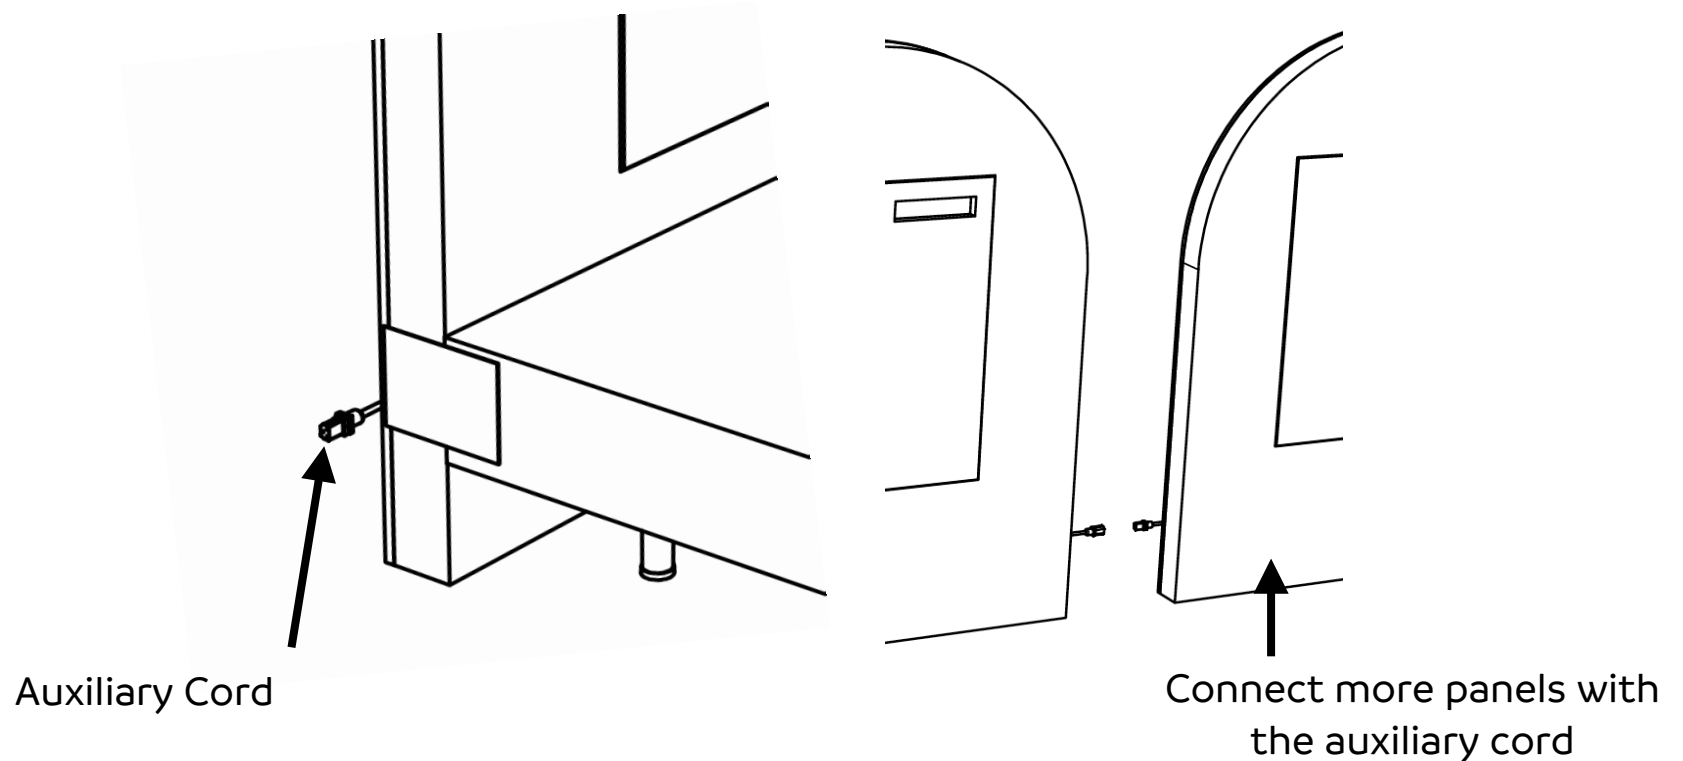

Cleaning

- We suggest a quick wipe every day after use . A more rigorous cleaning can be completed once a week.
- Before you start to clean unplug the equipment from the electrical outlet.
- To clean your Color Changing Light Up Panel, use a soft, lint free white cloth and mild detergent such as dish washing liquid.
- Never use an abrasive cloth or any solvent liquid such as mineral spirits or bleach. The light panel can become damaged if appropriate cleaners or cloths are not used.
- If the material is ripped, stop using immediately.

Maintenance

Your Color Changing Light Panel requires no maintenance other than a visual inspection for a damaged front panel. Check all wall hardware and ensure the panel is still secure. Make sure electrical cords are not damaged.

Technical

The Color Changing Light Panel is a low voltage device using a power supply that is double insulated. A class 2 device does not require portable appliance testing. We do however suggest an annual visual inspection looking for any damaged parts.

Guarantee

CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period (as shown in 8 below) the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts thereof) repaired, or at our discretion, replaced free of charge.

1. The appliance shall have been purchased and used solely in accordance with standard operating instructions and the technical and/or Safety Standards required in the country where this appliance is to be used
2. All inquiries must be through such dealers. For appliances used in the UK., U.S.A., Channel Islands, Isle of Man, and Republic of Ireland the appliance should be returned together with this guarantee and proof of purchase promptly on being found defective, at the purchasers risk and expense, to the authorized dealer from whom the appliance was purchased.
3. This guarantee shall not apply to damage caused through fire, accident, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through where this appliance is used, or to damage occurring during installation, adaptation, modifications, or use in an improper manner or inconsistent with the technical and/or safety standards required in the country transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by a person not authorized by us, the purchaser shall not be entitled to any rights and/or remedies under this guarantee.
5. The purchaser sole and exclusive remedy under this guarantee against us is for the repair (or at our discretion the replacement) of the appliance or any part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to lamps, batteries, color filters, cabinet parts or any other parts of a limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or defective part which has been replaced shall become our property until paid for in full.
8. The guarantee period applicable to all new appliances shall be 24 months.

Wall Panel (SP7270) - 49.5"H x 48"W x 3.5"D
(1257mm x 1219mm x 89mm)
Weighs 46 lbs. (21 KG)
Floor Platform (SP7168) - 48"L x 47.25"W x 11.4"H
(1219mm x 1200mm x 289.5mm)
Weight 33lbs. (15 KG)

Disclaimer

No part of this manual may be reproduced in any form or by any means
(graphic, electronic or mechanical, including recording, taping,
photography or information retrieval system) without express written
permission of the publisher of this material.
All information correct at date of publication.



QUESTIONS? call us at 800-231-6329 or email us at customercare@funandfunction.com.
We are committed to going above and beyond to address your questions, ideas and feedback.

