



**WHERE KIDS OF ALL ABILITIES
LEARN THROUGH PLAY!**

INFLATION INSTRUCTIONS

- **AIR-LITE™ RAFT PLATFORM SWING**
- **AIR-LITE™ ROCKING RAFT**
- **AIR-LITE™ JR. BOLSTER SWING**
- **AIR-LITE™ SEAL BOLSTER SWING**

Congratulations on your Air-Lite purchase! Please follow these easy instructions for inflating and deflating. Note: Valves are spring-loaded and will automatically close to retain the air during inflation.


Questions? We're happy to help. Please call us at 800-231-6329.



To open, rotate the valve counter clockwise and pull.



The spring-loaded plunger is in the center.

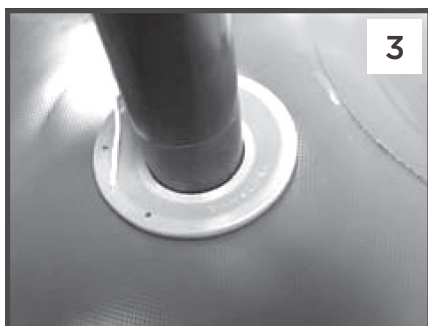

Inflate by pressing air hose onto valve.



To deflate, press plunger in open valve and rotate clockwise.

Small inflators may not have enough power to fully inflate the product. Use a powerful inflator (4+ hp), such as a Magic Air Inflator. Make sure the valve cover is securely tightened.

Note: The valve has a 'hold-open' feature for deflating. Close this valve before inflating to prevent air from escaping. To close the valve, fully depress the center plunger and rotate counterclockwise. The plunger will pop up and the valve will close.

▶ See instructional video at FunandFunction.com